




A division of TAL Holdings LLC



DIY Bird House

Materials List

(2) 1x6x5.5" Cedar
(1) 1x8x6.5" Cedar
(1) 1x8x7.25" Cedar
(8) 1 1/2" Galvanized 4d Nails
3/8" diameter x 7" long Dowel
4" diameter Perforated PVC Pipe 4" long
2 #10 x 2 1/16" Screw Hooks
12" #16 Single Jack Chain
Cedar Stain

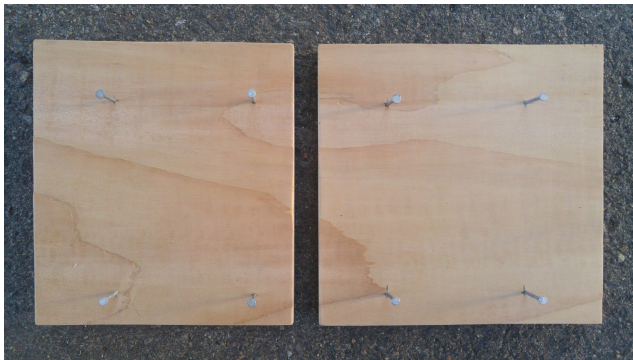

1. Start eight 1 1/2" nails in the 1x8 roof pieces.



2. Line up the 1x6 front and back pieces with the 4" PVC and insert the 3/8" dowel through the front piece and through the back until it's flush. The front piece has a 1 1/8" hole centered 2" in from each edge and a 3/8" hole centered 1 1/2" in from each edge. The back piece has a 3/8" hole in the center and four 3/8" holes centered 1 1/2" in from each edge to form an X.



3. Place the first roof piece on top of the front and back pieces and drive all of the nails.



4. Place the second roof piece on top of the front and back pieces and drive all of the nails. The longer roof piece overlaps the shorter piece at the top.



5. Predrill holes for the screw hooks with one on each side. Handscrew the hooks so the opening is facing down.



6. Attach the chain and hang outside!



7. Optional: Stain to increase the longevity of your bird house.