

RUSTIC TEA SHELF



MATERIALS

- 1x4 30" Fir (3) (back)
- 1x4 28½" Fir (2) (top/bottom)
- 1x4 10½" Fir (2) (sides) (45° angle cut on one end)
- 1½" Finish nails (20)
- 1¼" Pocket screws (6)
- Screw hooks (4)
- Wood glue
- Stain, Chalkboard Paint, or Spray Paint

ASSEMBLY TOOLS

- Hammer
- Tape measure
- Pencil
- Drill
- Kreg jigs
- 12" clamps (2)
- Nail gun
- Paint brush or foam brush (unless spray paint is used)









AND




www.enerstructa.com

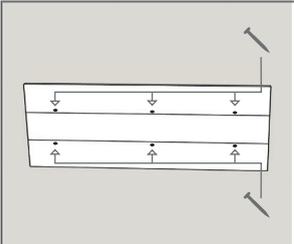

STEP ONE


Build the back panel by placing the three 30" 1x4s side-by-side, add wood glue between where each board meets, and clamp each side of the boards with the two 12" clamps. Attach the boards together with six pocket screws using a Kreg jig.

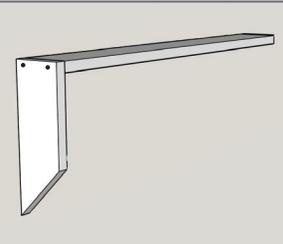

STEP TWO


Take one of the 10½" 1x4 side pieces and one of the 28½" 1x4s for the top and attach them together with wood glue between where the boards meet and two nails.

Tip: Predrilling holes for the nails and starting the nails in the holes will make the assembly process easier.

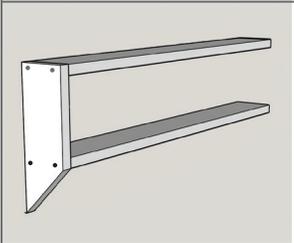


STEP THREE

Attach the bottom 28½" 1x4 to the side piece at the top of the 45 degree angle with wood glue between where the boards meet and two nails.

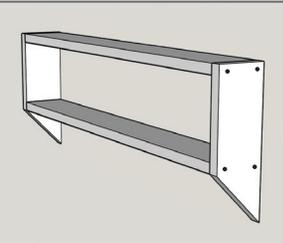


STEP FOUR

Attach the other side piece to the top and bottom 28½" 1x4 boards with wood glue between where the boards meet and four nails.

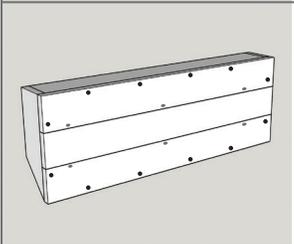


STEP FIVE

Line up the back panel with the backside of the front frame and attach with wood glue between where the boards meet and twelve nails along the outer edges.

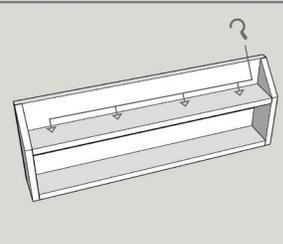

STEP SIX

Measure and predrill holes for the four screw hooks and install them by hand.

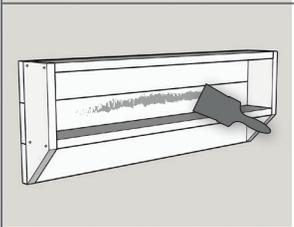

STEP SEVEN

Finish your tea shelf with stain or paint, hang on your wall and enjoy!

Tip: Different wall materials require different types of fasteners. Use fasteners suitable for your walls.

NOTES:
